

## GV-PCR1352 Enrollment Reader



### INTRODUCTION

GV-PCR1352 is a USB card reader designed to assist with Card or Fob enrollment to GV-ASManager. It reads the ID number of a detected card or fob, and simulates entering the ID number into GV-ASManager or any other software. The user can easily create user accounts on GV-ASManager by inserting 13.56 MHz cards or fobs into the GV-PCR1352 Enrollment Reader.

### SPECIFICATIONS

System Requirements		
OS	32-bit	Windows 7 / 8 / 8.1 / 10
	64-bit	Windows 7 / 8 / 8.1 / 10 / Server 2012 / 2012 R2 / 2016
GV-ASManager Version	All versions	
Operational		
Frequency	13.56 MHz	
Max. Distance	2 cm	
Read Time	200 ms	
Read Interval	0.5 s	
Environmental		
Operating Temperature	0 ~ 50°C (32 ~ 122°F)	
Operating Humidity	0 ~ 90% RH (non-condensing)	
Mechanical		
LED Indicator	1 LED (dual-color; power, enrollment)	
Connector	USB	
Dimensions	110 x 80 x 26 mm (4.3 x 3.1 x 1.02")	
Cable Length	140 cm (55")	
Weight	160 g (0.35 lb)	
Others		
Certification	CE, FCC, RoHS	

#### Note:

1. Drivers are not required for GV-PCR1251 / 1352s.
2. Specifications are subject to change without notice.

### ACCESSORIES

GV-AS ID Card, Key Fob, Patrol Fob, Sticker	13.56 MHz cards, fobs and stickers are available.
---	---