


# **GV-PA902BT Gigabit BT PoE++ Adapter**



GV-PA902BT is a 1-Port 10/100/1000 Mbps Gigabit Power over Ethernet (PoE) adapter. The adapter supports IEEE802.3af/at/bt Power over Ethernet standard, with a maximum power output of 95 W through a single Ethernet cable. Adopting the PoE adapter enables you to mount an IP camera anywhere in a building where power outlets are not available.

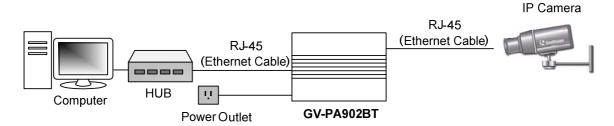

## **Packing List**

- 1. GV-PA902BT x 1
- 2. Power Cord x 1
- 3. Rubber Feet x 4

#### **Connections**

Two Ethernet cables are required for the connection.

- 1. Connect one end of the first Ethernet cable into the "Data in" port on the GV-PA902BT, and the other end to the LAN port on a Hub / Router.
- 2. Connect one end of the second Ethernet cable into the "PoE Out" port on the GV-PA902BT, and the other end to the IP camera.
- 3. Connect the GV-PA902BT to power using the supplied power cord.



# **Hardware Description**

#### **Front Panel**




### Intelligent display of PoE power supply

When using the PoE power supply to connect the PD equipment, wait patiently for about 10 seconds while connecting.

#### **LED** indicator

LED	Color/Status	Description
PWR	Green On	Power on
	Off	Power off
PoE	Green On	Power is supplied to connected devices
30%	Green On	Power output reaches 30%
60%	Green On	Power output reaches 60%
90%	Green On	Power output reaches 90%

#### **Rear Panel**

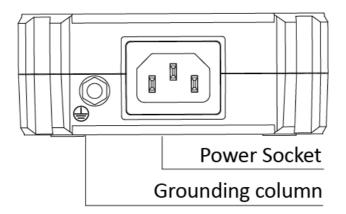

2


April 13, 2020



#### **Mount Installation**


### Desktop

To install GV-PA902BT on a leveled surface, attach the four supplied rubber feet at the bottom of the adapter as illustrated and place it on a leveled surface.

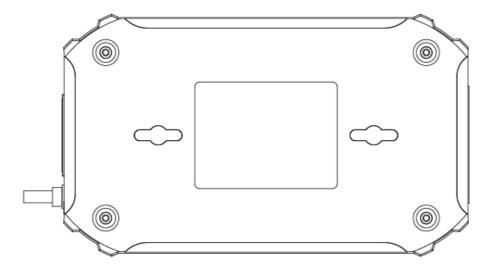

#### Wall

For wall mount, insert on the desired wall two self-prepared screws that align to the base of the GV-PA902BT. Tighten the screws to the point where there are about 1.5 mm left hanging out and hang the GV-PA902BT onto the screws.

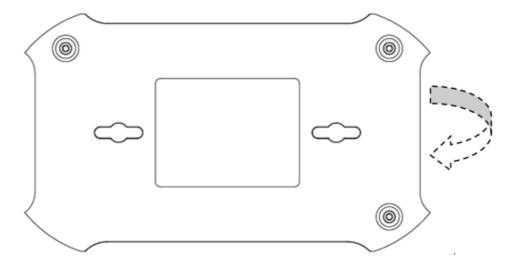

## **Specifications**

For detailed specifications, see **Datasheet**